# PARTS LIST FDG15-PL

# **DEMOLITION AND SORTING GRAB**

from serial number 270592 and up



### SUPPLY PERIOD OF SPARE PARTS

Thank you for purchasing a Furukawa Rock Drill product.

Please note that the supply of spare parts will be assured for 10 years after the termination of production. Although the supply of spare parts is terminated in principle at the maturity of the subject supply period, we may be able to supply them upon request even after the expiration of the supply period on condition that the delivery date and price are subject to negotiation.

Even if it is within the supply period, however, the delivery date, price, etc. may be subject to negotiation when it is difficult to keep stocks should the purchased parts, such as electronic parts, etc., be not available because the manufacturer does not produce them anymore.


If you have any questions about any particular model subject to the warranty as stated above and the time limit of spare parts supply, please contact your nearest FRD Europe B.V. distributor.

## USING THE PARTS LIST

- 1. This parts list describes the components of a demolition and sorting grab.
- 2. When ordering a part, refer to the illustrations and lists in this parts list and then inform the FRD Europe B.V. distributor in your area of the following items.
  - (1) Model name
  - (2) Serial No.
  - (3) Part No.
  - (4) Part name
  - (5) Quantity
- 3. Use "Genuine Furukawa Rock Drill Parts" when replacing all parts.
- 4. The illustrations in this parts list show the positions and shapes of the parts so that a user can order a part without any problem.
  - Do not repair a demolition and sorting grab by using this parts list.
- 5. The parts in this list are subject to change for improvement without notice on the part of the manufacturer.


### CONTENTS

GROUP NAME	PAGE
FRAME AND ROTATOR ASSEMBLY	01-01
SHELLS AND CYLINDER ASSEMBLY	02-01
HYDRAULIC HOSES AND FITTINGS	03-01
HYDRAULIC CYLINDER ASSEMBLY	04-01

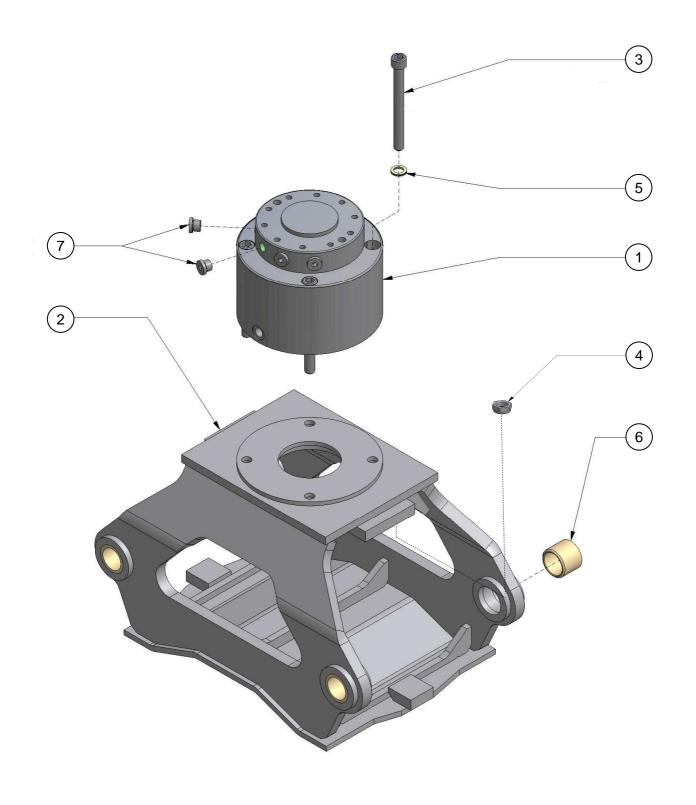


### FRAME AND ROTATOR ASSEMBLY

FRAME AND RUTATOR ASSEMBLY								
ITEM	PART NO.	PART NAME	Q'TY	REMARKS				
1	3007000034	ROTATOR ASSEMBLY	1					
2	2002027101	FRAME	1					
3	5001001234	SCREW - ROTATOR/FRAME	4	TORQUE 279 Nm				
4	5001006002	NUT	4					
5	5001002083	WASHER	4					
6	5003002113	BUSHING - SHELL PIVOT PIN	4					
7	5002001217	PLUG	4					

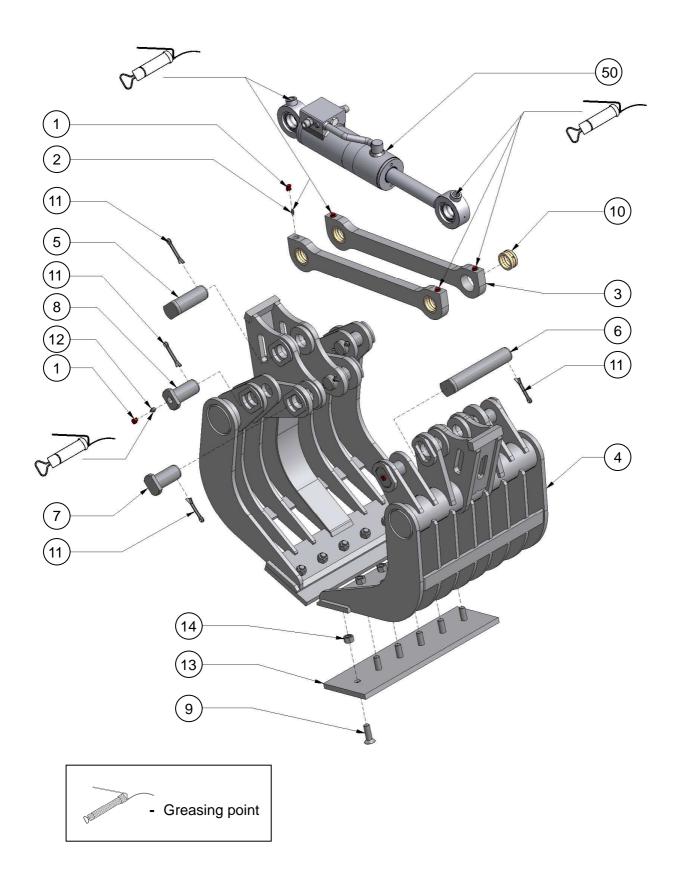


### **SHELLS AND CYLINDER ASSEMBLY**

	DART NO	DART NAME		DEMARKS
ITEM	PART NO.	PART NAME	Q'TY	REMARKS
1	5003001003	GREASE NIPPLE DUST CAP	8	
2	5003001002	GREASE NIPPLE	4	
3	2004033010	SYNCHRONIZATION LINK	2	
4	2006027701	SHELL SET	1	
5	3009040042	CYLINDER PIN	1	
6	3009040043	CYLINDER/LINK PIN	1	
7	3009040040	SYNCHRONIZATION LINK PIN	2	
8	3009040041	SHELL PIVOT PIN	4	
9	5001001216	SCREW	12	
10	5003002110	BUSHING - SYNCHRONIZATION LINK	4	
11	5001004010	SPLIT PIN	8	
12	5003001001	GREASE NIPPLE	4	
13	5004001385	CUTTING EDGE SET	1	
14	5001006006	NUT	12	
50	2011033500	HYDRAULIC CYLINDER ASSEMBLY	1	SEE PAGE 04-01

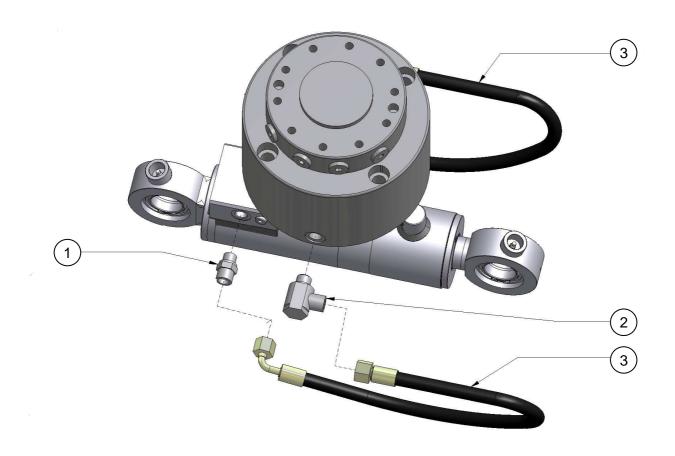

### **HYDRAULIC HOSES AND FITTINGS**

ITEM	PART NO.	PART NAME	Q'TY	REMARKS
1	5002001013	CONNECTOR	2	TORQUE 80 Nm TORQUE 100 Nm
2	5002001055	SWIVEL CONNECTOR	2	TORQUE TOO NIII
3	5002010185	HOSE ASSEMBLY	2	
-				

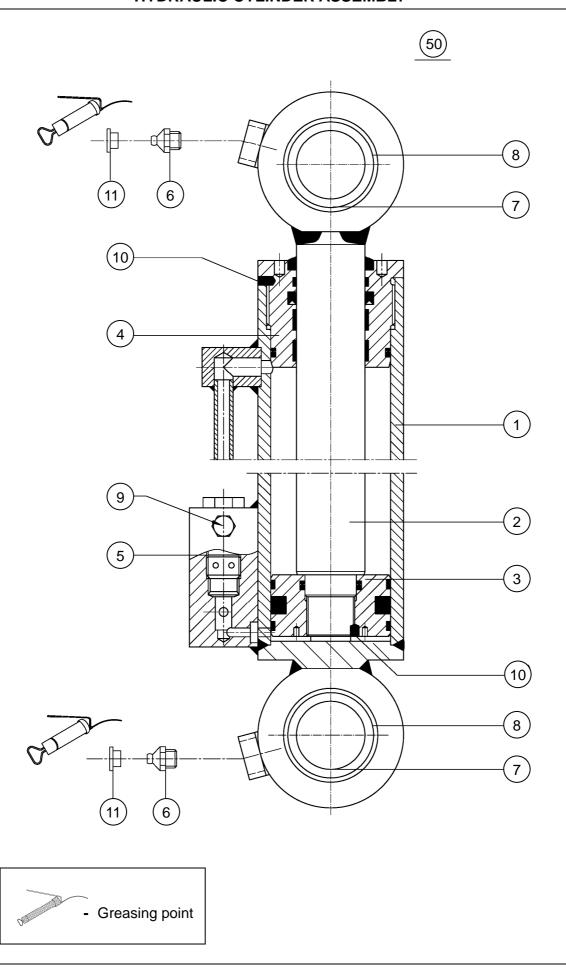

### **HYDRAULIC CYLINDER ASSEMBLY**

TIEM	HYDRAULIC CYLINDER ASSEMBLY						
1       2011033501       CYLINDER TUBE       1         2       2011033502       PISTON ROD       1         3       2011033503       PISTON       1         4       2011033504       CYLINDER HEAD       1       USE LOCTITE         5       5002008044       NON-RETURN VALVE       1       TORQUE 45 Nm         6       5003001002       GREASE NIPPLE       2         7       5003003008       BEARING       2         8       5003004006       CIRCLIP       4         9       5002001254       PLUG       1         10       5001007013       SET SCREW       2       USE LOCTITE         11       5003001003       GREASE NIPPLE DUST CAP       2	ITEM	PART NO.	PART NAME	Q'TY	REMARKS		
2       2011033502       PISTON ROD       1         3       2011033503       PISTON       1         4       2011033504       CYLINDER HEAD       1       USE LOCTITE         5       5002008044       NON-RETURN VALVE       1       TORQUE 45 Nm         6       5003001002       GREASE NIPPLE       2         7       5003003008       BEARING       2         8       5003004006       CIRCLIP       4         9       5002001254       PLUG       1         10       5001007013       SET SCREW       2       USE LOCTITE         11       5003001003       GREASE NIPPLE DUST CAP       2		2011033500	HYDRAULIC CYLINDER ASSEMBLY	1			
3       2011033503       PISTON       1         4       2011033504       CYLINDER HEAD       1       USE LOCTITE         5       5002008044       NON-RETURN VALVE       1       TORQUE 45 Nm         6       5003001002       GREASE NIPPLE       2         7       5003003008       BEARING       2         8       5003004006       CIRCLIP       4         9       5002001254       PLUG       1         10       5001007013       SET SCREW       2       USE LOCTITE         11       5003001003       GREASE NIPPLE DUST CAP       2	1	2011033501	CYLINDER TUBE	1			
4       2011033504       CYLINDER HEAD       1       USE LOCTITE         5       5002008044       NON-RETURN VALVE       1       TORQUE 45 Nm         6       5003001002       GREASE NIPPLE       2         7       5003003008       BEARING       2         8       5003004006       CIRCLIP       4         9       5002001254       PLUG       1         10       5001007013       SET SCREW       2       USE LOCTITE         11       5003001003       GREASE NIPPLE DUST CAP       2	2	2011033502	PISTON ROD	1			
5       5002008044       NON-RETURN VALVE       1       TORQUE 45 Nm         6       5003001002       GREASE NIPPLE       2         7       5003003008       BEARING       2         8       5003004006       CIRCLIP       4         9       5002001254       PLUG       1         10       5001007013       SET SCREW       2       USE LOCTITE         11       5003001003       GREASE NIPPLE DUST CAP       2	3	2011033503	PISTON	1			
6       5003001002       GREASE NIPPLE       2         7       5003003008       BEARING       2         8       5003004006       CIRCLIP       4         9       5002001254       PLUG       1         10       5001007013       SET SCREW       2       USE LOCTITE         11       5003001003       GREASE NIPPLE DUST CAP       2	4	2011033504	CYLINDER HEAD	1	USE LOCTITE		
7       5003003008       BEARING       2         8       5003004006       CIRCLIP       4         9       5002001254       PLUG       1         10       5001007013       SET SCREW       2       USE LOCTITE         11       5003001003       GREASE NIPPLE DUST CAP       2	5	5002008044	NON-RETURN VALVE	1	TORQUE 45 Nm		
8       5003004006       CIRCLIP       4         9       5002001254       PLUG       1         10       5001007013       SET SCREW       2       USE LOCTITE         11       5003001003       GREASE NIPPLE DUST CAP       2	6	5003001002	GREASE NIPPLE	2			
9       5002001254       PLUG       1         10       5001007013       SET SCREW       2       USE LOCTITE         11       5003001003       GREASE NIPPLE DUST CAP       2	7	5003003008	BEARING	2			
10         5001007013         SET SCREW         2         USE LOCTITE           11         5003001003         GREASE NIPPLE DUST CAP         2         2	8	5003004006	CIRCLIP	4			
11 5003001003 GREASE NIPPLE DUST CAP 2	9	5002001254	PLUG	1			
	10	5001007013	SET SCREW	2	USE LOCTITE		
** 2011033505 CYLINDER SEAL KIT	11	5003001003	GREASE NIPPLE DUST CAP	2			
	**	2011033505	CYLINDER SEAL KIT	**			



# FRD FURUKAWA ROCK DRILL EUROPE B.V.

Proostwetering 29 3543 AB Utrecht, The Netherlands Tel.: +31-(0)30-2475160 Fax: +31-(0)30-2412305

> Book No.: FDG15-K201E Date of Issue : August 2016